



## Configuring

# Auto Start Rec options changing

---

### Question:

How do the automatic video recording strategies (Auto Start Rec) change when my SmartyCam GP HD 2.2 is used in standalone mode with/without an ECU connected?

### Answer:

When SmartyCam GP HD 2.2 is not connected to an AiM master unit (standalone mode), it will feature the following automatic start recording options (Menu – Settings – Auto Start Rec), depending if connected or not to an ECU.

**N.B.:** Auto Start Rec options have been included starting from firmware version **01.04.14** onwards and it is valid for **SmartyCam GP HD 2.2 only**.

#### Without ECU:

- Logger Command \*
- Spd 10mph- 15km/h
- Spd 20mph- 35km/h
- Spd 30mph- 50km/h
- Accel Th. >Low
- Accel Th. Med
- Accel Th. High
- Only Manual

\*Parameters tab settings; main logger configuration

#### With ECU:

- Rpm or Spd \*
- Only Rpm \*
- Rpm and Spd \*
- Spd 10mph- 15km/h
- Spd 20mph- 35km/h
- Spd 30mph- 50km/h
- Accel Th. >Low
- Accel Th. Med
- Accel Th. High
- Only Manual

\*Automatic threshold values:

RPM > 800

Speed > 10 km/h