



FAQ

Frequently asked questions

Auto Start Rec options changing





Configuring

Auto Start Rec options changing

Question:

How do the automatic video recording strategies (Auto Start Rec) change when my SmartyCam GP HD 2.2 is used in standalone mode with/without an ECU connected?

Answer:

When SmartyCam GP HD 2.2 is not connected to an AiM master unit (standalone mode), it will feature the following automatic start recording options (Menu – Settings – Auto Start Rec), depending if connected or not to an ECU.

N.B.: Auto Start Rec options have been included starting from firmware version **01.04.14** onwards and it is valid for **SmartyCam GP HD 2.2 only**.

Without ECU:

- Logger Command *
- Spd 10mph- 15km/h
- Spd 20mph- 35km/h
- Spd 30mph- 50km/h
- Accel Th. >Low
- Accel Th. Med
- Accel Th. High
- Only Manual

*Parameters tab settings; main logger configuration

With ECU:

- Rpm or Spd *
- Only Rpm *
- Rpm and Spd *
- Spd 10mph- 15km/h
- Spd 20mph- 35km/h
- Spd 30mph- 50km/h
- Accel Th. >Low
- Accel Th. Med
- Accel Th. High
- Only Manual

*Automatic threshold values:

RPM > 800

Speed > 10 km/h